
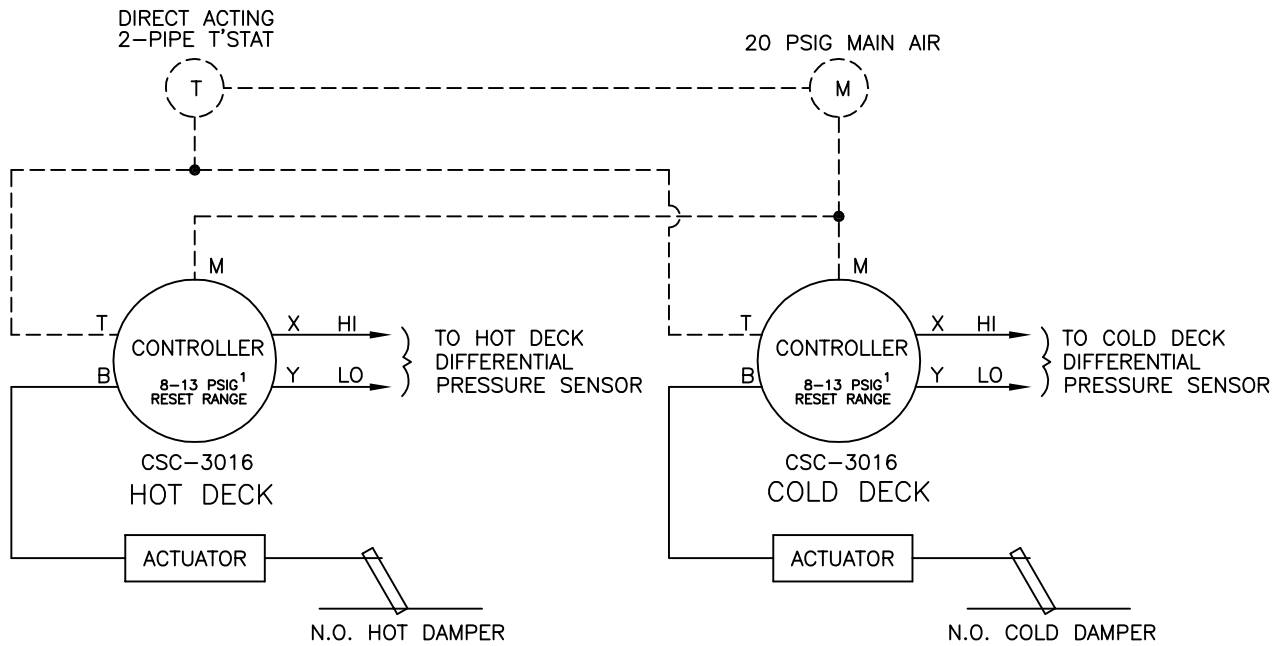


A direct acting, two-pipe thermostat is required. Both dampers are normally open. Hot and cold decks are system pressure independent. Maximum heating and cooling airflow setpoints are constant. When the space temperature is warm, the cold damper is controlling at the maximum CFM setting and the hot damper is closed. As the space temperature drops, the cold damper modulates closed as the hot damper opens. If the space temperature continues to drop, the cold damper shuts off and the hot damper controls at the maximum CFM setting.

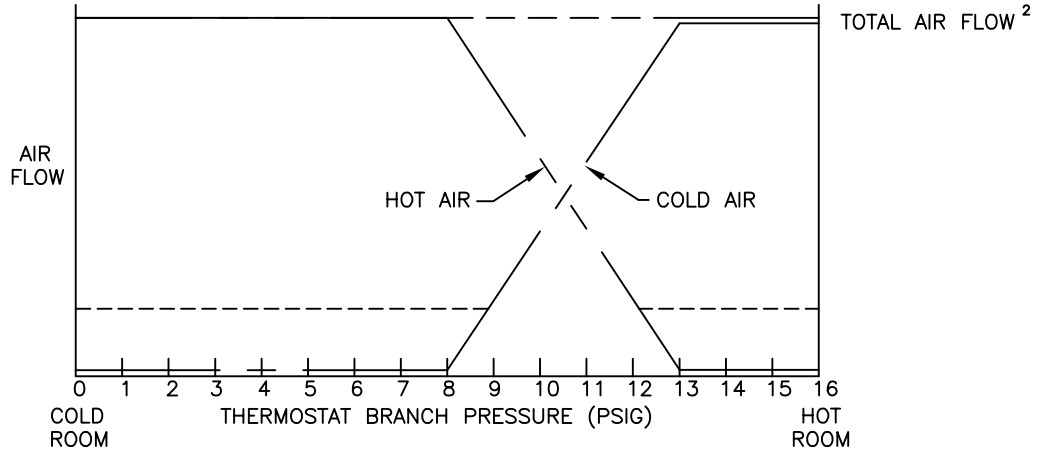

¹ CONTROLLER REQUIRES FIELD CALIBRATION AND SET UP UNLESS OTHERWISE SPECIFIED. IF FACTORY CALIBRATION OPTION IS USED, THE RESET SPAN AND STARTPOINT WILL BE ADJUSTED AS SHOWN ABOVE UNLESS OTHERWISE SPECIFIED.

² AIR VOLUME WILL DEVIATE FROM CONSTANT AIRFLOW DURING THE MIXING STAGE.

————— FACTORY PIPING - - - - - FIELD PIPING

PNEUMATIC AIR CONSUMPTION 2.0 SCFH



TITLE:	DD402RC	DRN BY:	AWW	DATE:	04/13/98	DRAWING NO.	19718
PRESSURE INDEPENDENT PNEUMATIC CONTROLS		CKD BY:	WAE	DATE:	10/28/08	REV:	
THIS DRAWING CONTAINS PROPRIETARY DATA. UNAUTHORIZED DISCLOSURE, REPRODUCTION, OR USE IS STRICTLY PROHIBITED WITHOUT WRITTEN PERMISSION							